


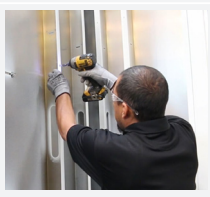

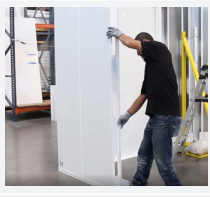

McCain Walls®

Horizontal Sliding Panel Instructions

McCain Walls Horizontal Sliding Panel (HSP) kit's innovative design closes small gaps in modular wall lengths that are not multiples of 6 inches. The sliding panel eliminates the need to retrofit standard panels or use a less than a superb option for closing gaps.

The HSP kit comes preassembled, fastened together with a press-in stud and locking washer and wingnut. When installing, keep wingnuts loose until the final placement of the panel is made.

INSTALLATION INSTRUCTIONS

1.	Stand the HSP upright and insert into the bottom rail, slide flush against the existing wall panel	
2.	Fasten and secure the HSP to the previous wall panel	
3.	Add the top rail and secure in place	
4.	Slide the panel to the desired length	
5.	Tighten the wingnuts on the back side of the panel	

RECOMMENDATION

To achieve a wall length that is not in multiples of six inches, we recommend that a 6" and 12" panel be ordered, with the HSP kit.

For more information or to request a quote call us at **760.295.9230** or email us at info@mccainwalls.com.